



THANKS FOR YOUR PURCHASE

The Rhino® Coffee Gear Hand Grinder is perfect for grinding coffee on-the-go for home, work, and travel.

For more tips and tricks, go to rhinocoffeegear.com

AeroPress® is a registered trademark of Aerobie, Inc. Palo Alto, CA, USA.

HOW TO USE YOUR GRINDER



1 Remove the grinder and parts from the box.



2 Measure the desired amount of beans and pour into the grinding chamber.



3 Replace lid securely on grinding chamber.



4 Adjust the grind by turning the adjustment nut clockwise for finer and anti-clockwise for coarser.



5 Secure handle to the top nut and begin grinding, making sure to keep the handle level.

USING THE AEROPRESS® ADAPTER (RWSHGA ONLY)



1 Remove the bottom grinds chamber and replace with the AeroPress® adapter.



2 Attach to the AeroPress®.



3 Grind away.

CLEANING YOUR GRINDER



1 Unscrew the adjustment nut on the bottom of the grind chamber.



2 Remove the inner ceramic burr.



3 Tip the grinder upside down to remove the outer burr.



4 Wash all parts with warm, soapy water and leave to dry.



5 Once dry, follow the reassembly instructions.

REASSEMBLING YOUR GRINDER



1 Insert the spring onto the middle pin of the grinding mechanism.



2 Insert the outer burr. The small teeth on the burr are to face upwards.



3 Insert the inner burr so it fits nicely into the outer burr.



4 Push the inner burr down slightly, engaging the inner spring.



5 Replace the adjustment nut, with the flat side facing up. Turn clockwise to tighten.



HAND GRINDER INSTRUCTION MANUAL



RWHANDGRINDER
Tall Hand Grinder

RWSHGA
Compact Hand Grinder